


**EMBLEM-Z3000iA**

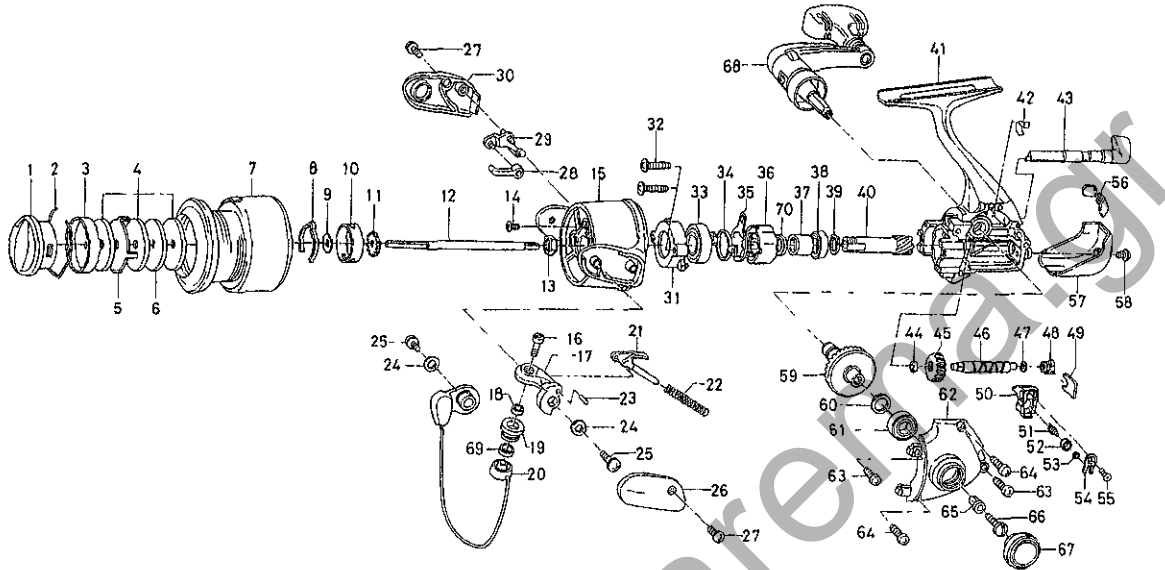

**Key No. Parts No. Parts Name**

2-7	F68-0901	SPOOL
1	F66-2001	DRAG KNOB
2	F71-0001	DRAG WASHER RET
3	F68-1301	DRAG KNOB CLICK PLT
4	F69-8001	DRAG WASHER
5	F67-6401	EARED WASHER
6	F68-1101	KEY WASHER
8	F70-9001	SPOOL CLICK LEAF SPRING
9	E39-7901	SPOOL WASHER
10	F69-7901	CLICK LEAF SPRING HOLDER
11	E41-3101	CLICK GEAR
12	F68-0001	MAIN SHAFT
13	340-6604	ROTOR NUT
14	B55-7601	ROTOR NUT LOCK SCREW
15	F64-2504	ROTOR
16	F62-5201	LINE ROLLER SCREW
17	F62-3503	BAIL ARM
18	F62-5101	BALL BEARING A
19	F62-5001	LINE ROLLER
20	F68-0501	BAIL
21	F69-1102	BAIL SPRING SHAFT
22	F62-3801	BAIL SPRING
23	F62-3701	BAIL ARM PIN
24	F63-1801	BAIL HOLDER WASHER
25	351-6101	BAIL ARM SCREW
26	F66-0703	BAIL SPRING COVER
27	352-2504	BAIL SPRING COVER SCREW
28	F64-6301	BAIL TRIP PLT
29	F62-4701	BAIL TRIP LEVER
30	F66-0803	BAIL TRIP COVER
31	F67-9801	BEARING RET A
32	E24-7402	BEARING RET SCREW
33	F64-1601	BALL BEARING B
34	F67-9701	BEARING RET B
35	F64-1401	ROLLER CLUTCH RET

**Key No. Parts No. Parts Name**

36	F64-1201	ROLLER CLUTCH
37	F73-2201	SPACING SLEEVE
38	F64-1101	BALL BEARING C
39	F26-2801	PINION WASHER
40	F67-9601	PINION GEAR
41	F67-8701	BODY
42	F67-9201	A/R CAM SPRING
43	F67-9101	A/R LEVER
44	F63-1401	WORM SHAFT BUSH
45	F64-0902	WORM SHAFT GEAR
46	F64-0802	WORM SHAFT
47	375-4101	WORM SHAFT WASHER
48	F67-9501	WORM SHAFT COLLAR
49	F74-9401	WORM SHAFT RET
50	F67-9901	OSC SLIDER
51	F64 1901	OSC PAWL
52	F62 2701	OSC PAWL BUSH
53	375 0801	OSC PAWL WASHER
54	F62 2901	OSC SLIDER COVER
55	352 1502	OSC SLIDER COVER SCREW
56	F68 0201	SHIELD PLT
57	F68 0301	REAR COVER
58	E36-4203	REAR COVER SCREW
59	F66-1201	DRIVE GEAR
60	373-7808	DRIVE GEAR WASHER
61	E15-4001	BALL BEARING D
62	F68-0101	SIDE COVER
63	E15-7502	SIDE COVER SCREW A
64	E15-8602	SIDE COVER SCREW B
65	F43-3502	HANDLE COLLAR
66	363-8511	HANDLE SCREW
67	F69-2401	HANDLE SCREW CAP
68	F68-0601	HANDLE
69	F70-1801	LINE ROLLER COLLAR
70	F73-2401	COLLAR