



Key No.	Parts No.	Parts Name	Key No.	Parts No.	Parts Name
2-7	F77-3601	SPOOL	36	F64-1201	ROLLER CLUTCH
1	F76-0201	DRAG KNOB	37	F84-4801	SPACING SLEEVE
2	F74-2501	DRAG WASHER RET	38	F64-1101	BALL BEARING C
3	F69-0203	DRAG KNOB CLICK PLT	39	F26-2801	PINION COLLAR
4	F69-2301	DRAG WASHER	40	F67-9601	PINION GEAR
5	F69-0101	EARED WASHER	41	F69-2501	BODY
6	F76-1001	KEY WASHER	42	F67-9201	A/R CAM SPRING
8	F70-9001	SPOOL CLICK LEAF SPRING	43	F67-9101	A/R LEVER
9	E39-7901	SPOOL WASHER	44	F63-1401	WORM SHAFT BUSH
10	F69-7901	CLICK LEAF SPRING HOLDER	45	F64-0902	WORM SHAFT GEAR
11	E41-3101	CLICK GEAR	46	F64-0802	WORM SHAFT
12	F68-0001	MAIN SHAFT	47	375-4101	WORM SHAFT WASHER
13	340-6604	ROTOR NUT	48	F67-9501	WORM SHAFT COLLAR
14	B55-7601	ROTOR NUT LOCK SCREW	49	F74-9401	WORM SHAFT RET
15	F64-2507	ROTOR	50	F67-9901	OSC SLIDER
16	F62-5201	LINE ROLLER SCREW	51	F64-1901	OSC PAWL
17	F62-3504	BAIL ARM	52	F62-2701	OSC PAWL BUSH
18	F62-5102	BALL BEARING A	53	375-0801	OSC PAWL WASHER
19	F62-5001	LINE ROLLER	54	F62-2901	OSC SLIDER COVER
20	F69-2601	BAIL	55	352-1502	OSC SLIDER COVER SCREW
21	F69-1101	BAIL SPRING SHAFT	56	F68-0202	SHIELD PLT
22	F62-3801	BAIL SPRING	57	F68-0302	REAR COVER
23	F62-3701	BAIL ARM PIN	58	E36-4202	REAR COVER SCREW
24	F63-1801	BAIL HOLDER WASHER	59	F66-1201	DRIVE GEAR
25	351-6101	BAIL ARM SCREW	60	373-7808	DRIVE GEAR WASHER
26	F66-0702	BAIL SPRING COVER	61	E15-4001	BALL BEARING D
27	352-2501	BAIL SPRING COVER SCREW	62	F68-0104	SIDE COVER
28	F64-6301	BAIL TRIP PLT	63	E15-7502	SIDE COVER SCREW A
29	F62-4701	BAIL TRIP LEVER	64	E15-8602	SIDE COVER SCREW B
30	F66-0802	BAIL TRIP COVER	65	F43-3502	HANDLE COLLAR
31	F67-9801	BEARING RET A	66	363-8511	HANDLE SCREW
32	E24-7402	BEARING RET SCREW	67	F69-2402	HANDLE SCREW CAP
33	F64-1601	BALL BEARING B	68	F69-2801	HANDLE
34	F83-8601	BEARING RET B	69	F70-1801	LINE ROLLER COLLAR
35	F64-1401	ROLLER CLUTCH RET	70	F73-2401	COLLAR